

Taiacryl Pale Shade Tricombination

Taiacryl Yellow CD-RSLT

Taiacryl Red CD-2GLT



Taiacryl Blue CD-RFT

Na₂SO₄ 2g/l

Dayacid HP PH 4.0

120°C X 30min

Taiacryl Yellow CD-RSLT

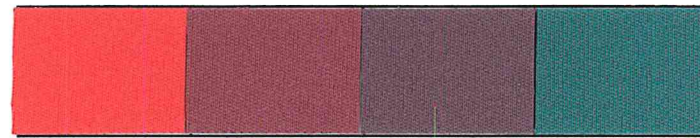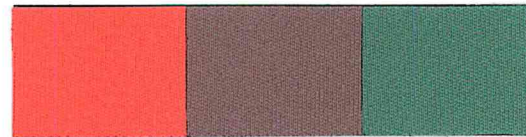

Taiacryl Red CD-2GLT

Taiacryl Blue CD-RFT

Taiacryl Pale Shade Tricombination

Taiacryl Yellow CD-RSLT

Taiacryl Red CD-2GLT

Taiacryl Blue CD-RFT

Na₂SO₄ 2g/l

Dayacid HP PH 4.0

120°C X 30min

Taiacryl Yellow CD-RSLT

1.00	
0	0

0.9		0.9	
0.10	0	0	0.10

0.7		0.7		0.7	
0.3	0	0.15	0.15	0	0.3

0.6		0.6		0.6		0.6	
0.4	0	0.3	0.1	0.2	0.2	0	0.4

0.4		0.4		0.4		0.4		0.4	
0.6	0	0.4	0.2	0.3	0.3	0.2	0.4	0	0.6

0.3		0.3		0.3		0.3		0.3		0.3	
0.7	0	0.5	0.2	0.4	0.3	0.3	0.4	0.2	0.5	0	0.7

0.1		0.1		0.1		0.1		0.1		0.1		0.1	
0.9	0	0.7	0.2	0.6	0.3	0.5	0.4	0.4	0.5	0.3	0.6	0	0.9

0		0		0		0		0		0		0			
1	0	0.9	0.1	0.7	0.3	0.6	0.4	0.5	0.5	0.4	0.6	0.3	0.7	0	1

Taiacryl Red CD-2GLT

Taiacryl Blue CD-RFT